



HYDRUS (BR 171 A/B)

Remote Control Guide



Fig. A Remote control







General

- The remote control is used to activate the test mode with high-resolution volume display, and optical pulse output. It can be ordered under order number 3074045.
- The device is supplied complete with batteries already fitted. The remote control is therefore ready for immediate use.

General procedure

- Take the remote control and hold it so that the side marked "LED" points towards the optical interface of the meter (Fig. A/B).
- The maximum space between the remote control and the optical interface of the meter should be 5 centimeters.
- Press shortly the button (Optical test pulses ON).
- The yellow "ACT" LED on the device (see Fig. C) glows to indicate that the remote control is in operation.



Fig. B Remote control



Fig. C "ACT" LED





HYDRUS

Performance of volume test

- Activate the test mode as described under General procedure.
- After activating the meter display alternately indicates "Out 4" and the high-resolution volume, e.g. 0.000000 m³ (Fig. D).





Fig. D Meter display with activated test mode

• HYDRUS now provides an output of the test pulse value for 3 hours shown in the display. The value depends on the nominal size of the meter (Fig. E).

TEST PULSE VALUES:

Q3	TEST PULSE VALUES	PULSE DURATION OPTOHEAD
1.6	1 ml	0.1 ms/pulse
2.5	2 ml	0.1 ms/pulse
4	4 ml	0.1 ms/pulse
6.3	4 ml	0.1 ms/pulse
10	10 ml	0.1 ms/pulse
16	40 ml	0.1 ms/pulse
25	40 ml	0.1 ms/pulse

Fig. E Test pulse values

- To end the test, briefly press button (Optical test pulses OFF) by holding the remote control via the optical interface.
- The yellow "ACT" LED on the device (see Fig. C) glows to indicate that the remote control is in operation.
- HYDRUS display no longer indicates "Out 4".
- To prevent accidental discharge of the battery, always end the test by pressing button (Optical test pulses OFF) and check that "Out 4" is no longer indicated on the display of HYDRUS.





Replacing batteries in the remote control

- To replace the batteries, remove the two cross-head screws on the back of the device and take off the cover (Fig. F).
- The new batteries must be fitted with the correct polarity.
- 3 pieces of AAA batteries with a voltage of 1.5 VDC are required.



Fig. F Back of remote control