

Capability List of Maintenance Organization
EASA DE.145.0021
FAA Repair Station AGGY136K



Model / Part Number **Name / Description**

3210	Heater, Fan
3639	Heater
3641	Heater
3862-1101 /-1201 /-1301 3862-2101 /-2201 /-2301 3863-1101 /-1201 /-1301 /-1401 3863-2101 /-2201 /-2301 /-2401	Air Inlet Duct / Air Outlet Duct
417U1201S01-A / ...S02-A	Toilet Assembly (LH / RH)
86500-109	Water Valve
86600-103 REV K / REV L	Flush Valve
9630300-1101 /-1111	Potable Water Control Unit
9630300-1203 /-1223	Indication Panel Potable Water
9632500-7001	Actuation Unit
9632500-8001	Control Cable, Drain FWD
9632500-9001	Control Cable, Drain
9632501-0001	Control Cable, Drain
9632501-1001 /-2001	Control Cable, Fill Drain
9632501-3001	Control Cable, Drain
9633501-3001 /-4001	Control Cable, Potable Water Drain
9633502-0001	Control Cable, Fill/Drain
9633502-1001	CTL Lever Waste Drain
9633502-2001 /-3001	Cable Control Waste Drain
9633502-4001	CTL Lever Service Waste Drain
9633502-5001	CTL Lever Waste Balancing
9633502-6001	Waste Balancing Cable Control
9633502-7001	Service Waste Drain Cable Control 1
ACU3855-01 /-02 /-04 /-05 /-06	Air Cooling Unit
ACU3859-01 /-02 /-03	Air Cooling Unit
ACU3864-00 /-01 /-02 /-03 /-10 /-20	Air Cooling Unit
ACU3866-01	Air Cooling Unit
AN6915-00 /-01	Indication Panel
AOA5001	Control Panel Long Range Tank
APS6967-00	Absolute Pressure Sensor
APS9105-00	Absolute Pressure Sensor
ASV5400-01	Air Shut Off Valve
ASVH6925-00	Air Stop Valve Heater
BWV9507-00	Bypass Water Valve
CC9182-00, CC9183-00	Cable Control 1, Cable Control 2
CM9190-00	Coding Module
CR3862-0101 /-0102 /-0103	Core
CR3863-0101 /-0102 /-0103	Core
CU9201-00	Control Unit
CV5660-00	Check Valve
CV9376-00	Check Valve
DF9344-00	Drinking Faucet

Capability List of Maintenance Organization
EASA DE.145.0021
FAA Repair Station AGGY136K



Model / Part Number **Name / Description**

DCU9571-00	Drying Control Unit
DV9169-00	Cable Assembly
DVA6960-00	Actuation Unit
EB3862-3102	Electronic Box (Sub-Assy of CR3862-xx)
EB3864-4000 / -4001 /-4002	Electronic Box (Sub-Assy of ACU3864-xx)
EB6300-00 / -01	Electronic Box (Sub-Assy of GCU3830-xx)
ECV9284-01	Electrical Check Valve
FCM6965-00 /-01	Flush Control Module (Sub-Assy of TA69xx-xx)
FCM9130-00 /-01	Flush Control Module
FCM9131-00	Flush Control Module (Sub-Assy of TA9124-xx)
FCM9212-01	Flush Control Module (Sub-Assy of TA9206-01)
FCU9811	Flush Control Unit
FCU9811-01 / FCU9816	Flush Control Unit
FD9343-00	Filter Device
FDCP9219-00	Fill/Drain Control Panel
FDP9296-01	Fill/Drain Nipple
FN787-01	Zonal Dryer Fan
FNH9217-01	Flush Nipple (heated)
FSD9480-00 /-10	Fire/Smoke Detector
FT9339-00 /-10 /-20 /-30 /-33 /-40	Faucet
FPH6985-101 to -104	Floor Panel Heated
FPH6985-201 to -204	Floor Panel Heated
FPH6985-301 to -302	Floor Panel Heated
FPH6985-401 to -408	Floor Panel Heated
FPH6985-901 to -904	Floor Panel Heated
FV9930-00 / -01	Flush Valve
G540DA5	Valve, Waste Balancing
G540DA51	Valve, Waste Drain
G540DA51-01	Valve, Waste Drain
G540DA72, G540DA72-01	Separator, Waste
G540DA74	Liquid Level Transmitter
G540DA9	Air Shut-Off-Valve
GCU3830-00 /-01	Ground Cooling Unit
GCU3830-10 /-20	Ground Cooling Unit
GCU9180-40 /-41	Galley Waste Disposal Control Unit (Sub Assy of GWD9180)
GWD6978-00	Galley Waste Disposal Unit
GWD9172-00	Galley Waste Disposal Unit
GWD9180-00 /-10	Galley Waste Disposal Unit
GWD9180-01 /-11	Galley Waste Disposal Unit
GWM5500-00 /-01	Gray Water Module
H3310A1	Heater
HCU9505-01	Humidification Control Unit
HIU787-01 /-02	Humidifier Interface Unit
IPCU6980-01	Ice Protection Control Unit
IPDU6981-XXXX Series	Ice Protection Data Unit

Capability List of Maintenance Organization
EASA DE.145.0021
FAA Repair Station AGGY136K



Model / Part Number **Name / Description**

J540AI1-300	Toilet Assembly (LH), Toilet Assembly (RH)
J540AI2-300	
J540AI1-500 /-520	Toilet Assembly (LH), Toilet Assembly (RH)
J540AI2-500 /-520	
J540AI1-510	Toilet Assembly (LH), Toilet Assembly (RH)
J540AI2-510 /-515	
J540AI1-600	Toilet Assembly (LH), Toilet Assembly (RH)
J540AI2-600	
J540AI1-700 /-701/-710/-711	Toilet Assembly (LH), Toilet Assembly (RH)
J540AI2-700 /-701/-710/-711	
J540AI3-300	Controller, Vacuum System
J540AI4-100	Generator, Vacuum
J540AI73	Sensor, Liquid Level
KP5081-00	Electrical Fuel Booster Pump
MSDV9712-00 /-10 /-20	Manual Sink Drain Valve
PA9285-01	Pressure Reservoir
PR603/1, PR603/2, PR603/2/X, PR6030A7	Pitot Tube
PR608	
PR6123	
PR6130/1	
PWM9290-01 /-03 /-04	Potable Water Tank Module
PWP6907-01	Potable Water Pump
PWP9282-01 /-02	Potable Water Pump
PWT9460-00	Potable Water Tank Module
PWT9338-00 /-33	Potable Water Tank
RCP5160-00, RCP5161-00	Flush Pump
RP9467-00	Recirculation Pump
RPCU9167-01	Residual Pressure Control Unit
RHS9503-00	Relative Humidity Sensor
RTA9147-00 / -01	Recirculating Toilet Module
RTA9465-00	Recirculating Toilet Assembly
RTA9713-00	Recirculating Toilet Module
RTC9468-00	Recirculating Toilet Control Unit
SA622-2	Current Indicator
SD9422-01	Smoke Detector
SD9425-01	Smoke Detector (limited to inspection/testing)
SD9470-22	Smoke Detector
SD9472-00	Smoke Detector
SHCM9280-02 /-03 /-04	System Heating Control Module
SP9289-01	Overflow Nipple (Heated)
SPL9181-00	Service Panel Lever Unit
SPL9205-00	Service Panel Lever Unit
TA6949-00 /-01, TA6950-00 /-01	Toilet Assembly
TA9115-00, TA9116-00	Toilet Assembly
TA9125-00, TA9126-00	Toilet Assembly

Capability List of Maintenance Organization
EASA DE.145.0021
FAA Repair Station AGGY136K



Model / Part Number **Name / Description**

TA9208-01	Toilet Assembly
TA9124-00 / -50	Toilet Assembly (LH / RH)
TBA9735-00 /-01,	Toilet Bidet Assembly
TBA9736-00 /-01	Toilet Bidet Assembly
TBA9745-00 / TBA9746-00	Toilet Bidet Assembly
TC7200A0A0	Temperature Controller
TS6340A0	Compartment Temperature Selector
VA3645	Fan, Axial
VA3660	Fan, Axial
VA4110	FWD Cargo Fan
VA4111-05 /-06	Fan, Variable Speed
VA4120-00	FWD.Cargo Fan
VD3800	Mixed Flow Fan
VD3810	Mixed Flow Fan
VD3820, VD3820-01	Fan, Mixed Flow
VD3870	Fan, Mixed Flow
VD3900-02 /-03	Recirculation Fan
VD3900-021	Recirculation Fan
VD3901-00	Fan, Recirculation
VD3909-00	Fan, Recirculation
VD3920	Fan, Extraction
VR3910	Fan, Extraction
VR3914-00	Fan
VR3916-00	Vacuum Generator
VR6962-00 / -01	Vacuum Generator
VR9218-01	Vacuum Generator
VR4100-02 /-03 /-04	Recirculation Fan
VSC8991, VSC8992, VSC8993, VSC8994	Vacuum System Controller
VSC9100-00 /-01 /-02	Vacuum System Controller
WC9340-01/-02	Water Cooler Assembly
WC9342-00 /-01	Water Cooler
WCU9164-01	Waste Control Unit
WCU9188-00	Waste Control Unit (Sub Assy of TM9185-00)
WCU6958-00	Waste Control Unit
WCU9214-01	Waste Control Unit
WDV5650-00	Drain Valve
WDV6959-00	Waste Drain Valve
WDV9215-00	Waste Dump Valve
WLS6902-00	Quantity Transmitter
WLS9292-01 /-02 /-03 /-04	Water Control Unit
WPV787-01	Water Pulse Valve
WT228/x-xxxx	Warntableau
WTA6906-00	Treatment Module PW
WV6966-00	Water Valve (Sub-Assy of TA6949 etc.)
WV9132-00	Valve Assy, Water (Sub Assy of TA9124)

Capability List of Maintenance Organization
EASA DE.145.0021
FAA Repair Station AGGY136K



Model / Part Number **Name / Description**

WV9135-00	Water Valve
WV9135-01	Water Valve
WV9737-00, WV9738-00	Water Valve
WV9940-00	Water Valve
WVA9504-00 / -01	Water Valve Assembly
WWP9278-01	WWS Control & Indication Panel
ZCU787-02 /-03 /-04	Zonal Control Unit

RT-220, RT-221	4004437-XXX	Radio Altimeter RX/TX
RA-210, RA-230	4004444-XXX	Radio Altimeter Indicator
RA-220	4007339-XXX	Radio Altimeter Indicator
SP-200	4008519-XXX	Autopilot Computer
AZ-241	4013241-XXX	Air Data Computer
RA-215, RA-235	4014267-XXX	Radio Altimeter Indicator
MS-500	4018368-XXX	Mode Selector
FZ-500	4018369-XXX	Flight Director Computer
PC-500	4018639-XXX	Autopilot Controller
MS-205	4020570-XXX	AP/FD Mode Selector
DS-125	4031609-XXX	True Air Speed / Temp. Indicator
PC-800	7000120-XXX	Autopilot Controller
CD-125	7000125-XXX	Air Data Command Display
AZ-800,AZ-810	7000700-XXX	Digital Air Data Computer
RA-315,RA-335	7000839-XXX	Radio Altimeter Indicator
AZ-648	7001648-XXX	Air Data Computer
MS-207	7001770-XXX	Mode Selector
RT-300	7001840-XXX	Radio Altimeter RX/TX
AZ-649	7002353-XXX	Air Data Sensor
AL-200, AL-300	7002412-XXX	Alt. Presel. Command Controller
DS-125A	7002638-XXX	True Air Speed / Temp. Indicator
ED-800	7003110-XXX	Electronic Display
DC-800	7003420-XXX	Display Controller
ED-600	7003430-XXX	Electronic Display
ID-800,ID-801,ID-802	7003652-XXX	Advisory Display
PC-400	7003897-XXX	Autopilot Controller
MS-400	7003938-XXX	Mode Selector
GC-600,GC-801,GC-880	7003975-XXX	Flight Guidance Controller
SC-800	7004123-XXX	Source Control
IU-800	7004283-901	Nav Interface Unit
SG-611,SG-811	7004544-XXX	Symbol Generator
AL-801	7004577-XXX	Altitude Preselect Control
VN-801	7004577-XXX	Vertical Navigation Control
DC-810	7005819-XXX	Display Controller
WC-800/810/874/884	7006921-XXX	Radar Controller
MC-800	7007062-XXX	Multifunction Display Controller
CD-810	7007549-XXX	Control Display Unit

**Capability List of Maintenance Organization
EASA DE.145.0021
FAA Repair Station AGGY136K**



Model / Part Number Name / Description

WI-440/450/650/660/ 700/870/ 880	7007700-XXX	Digital Indicator
FZ-710	7008138-XXX	Flight Control Computer
WU-450,WU-650	7008470-XXX	Receiver Transmitter Antenna
WC-650/660/700/870/ 880	7008471-XXX	Controller
WR-700, WR-701	7009330-XXX	Weather Radar
GC-810	7011702-XXX	Flight Guidance Controller
RM-850	7012100-XXX	Radio Management Unit
RZ-710	7012693-901	Servo Monitor
DC-811	7012977-XXX	Display Controller
RM-855	7013270-XXX	Radio Management Unit
DA-800	7013348-XXX	Data Aquisition Unit
WC-701	7013512-XXX	Beacon Controller
DU-870	7014300-XXX	Display Unit
BL-870	7014331-XXX	Bezel (inclinometer)
BL-871	7014332-XXX	Bezel (Buttons and Knobs)
AZ-840	7014700-XXX	Micro Air Data Computer
IM-803	7014940-XXX	Installation Module
GP-300	7015327-XXX	Guidance Panel Controller
DL-900	7016600-901	Data Loader
DL-900	7016600-902	Data Loader (fixed)
IC-800	7017300-XXXXXX	Integrated Avionics Computer
IZ-501	7020480-901	Data Nav Computer
WU-440 / 660 / 880	7021450-XXX	Receiver Transmitter Antenna
RNZ-850, RNZ-851	7510100-XXX	Integrated Navigation Unit
DF-850	7510114-XXX	Receiver Module
MT-851	7510124-XXX	Mount Assembly
NV-850	7510134-XXX	Receiver Module
XN-850	7510164-XXX	Cluster Module
DM-850	7510184-XXX	Interrogator Module
RCZ-8XX	7510700-XXX	Communication Unit
RCZ-8XX	7510733-XXX	Communication Unit
TR-833, TR-853	7510763-XXX	COM Transceiver Module
TR-850	7510764-XXX	COM Transceiver Module
XS-850	7510774-XXX	Mode S Module
XC-850	7510784-XXX	COM Cluster Module
MT-852	7510814-XXX	Mount Assembly
AV-850	7511000-XXX	Audio Control Unit
AV-850A	7511001-XXX	Audio Control Unit
XS-852	7517400-XXX	Diversity Mode-S
WR-800	MI 585350-XXX	Receiver Transmitter
WI-800	MI 585351-XXX	Color Indicator
WI-800	MI 585352-XXX	Color Indicator
WA-800	MI 585353-XXX	Antenna
WA-800	MI-585354	Antenna Pedestal

Capability List of Maintenance Organization
EASA DE.145.0021
FAA Repair Station AGGY136K



Model / Part Number **Name / Description**

DNCP	MI-585399-XXX	Data Navigation Control Panel
WA-700	MI-585467-XXX	Antenna Pedestal